

Safety Instructions

WARNING

Follow carefully this safety and installation instructions. Improper work may lead to serious harmful for your health and also may damage seriously the IntesisBox and/or any other equipment connected to it.

- IntesisBox must be installed by accredited electrician or similar technical personnel, following all the safety instructions given here, and in accordance always with the country legislation for installation of electric equipment.
- IntesisBox can not be installed outdoors or exposed to direct solar radiation, water, high relative humidity or dust.
- IntesisBox must only be installed in a restricted access location
- In case of wall mount, fix firmly IntesisBox on a not vibrating surface following the instructions below.
- In case of DIN rail mount fix IntesisBox properly to the DIN rail following the instructions below.
- Mounting on DIN rail inside a metallic cabinet properly connected to earth is recommended.
- Disconnect always power of any wires before manipulating and connecting them to IntesisBox.
- A power supply with an NEC Class 2 or Limited Power Source (LPS) and SELV rated is to be used.
- Respect always the expected polarity of power and communication cables when connecting them to IntesisBox.
- Supply always a correct voltage to power IntesisBox, see details of voltage range admitted by the device in the technical characteristics below.
- This device was designed for installation in an enclosure. To avoid electrostatic discharge to the unit in environments with static levels above 4 kV precautions should be taken when the device is mounted outside an enclosure. When working in an enclosure (ex. making adjustments, setting switches etc.) typical anti-static precautions should be observed before touching the unit

Installation instructions

- Disconnect from mains the power supply before connecting it to IntesisBox.
- Disconnect power of any bus or communication cable before connecting it to IntesisBox.
- Mount IntesisBox on the wall or DIN rail following the instruction given below, respecting the safety instructions given above.
- Connect a NEC Class 2 or Limited Power Source (LPS) and SELV rated power supply to IntesisBox, respect the polarity if DC power or Line and Neutral if AC power. Apply always a voltage within the range admitted by IntesisBox and of enough power (see technical characteristics).
- Circuit-breaker must be used before the power supply. Rating 250V-6A
- Connect the communication cables to IntesisBox, see details on the user's manual.
- Power IntesisBox and the rest of devices connected to it.

Configuration and setup

Use the software LinkBoxLON to configure IntesisBox, follow the instructions of the user's manual for more details.


See instructions to download and install the latest version of LinkBoxLON and the user's manual at

<http://www.intesis.com/down/lon/linkboxlon.html>


Wall mount

1. Separate the fixing clips in the bottom of the box, pushing them to the outside until hear the "click" which indicates that now the clips are in position for wall mount, see in the figure below.

Bottom view of the box

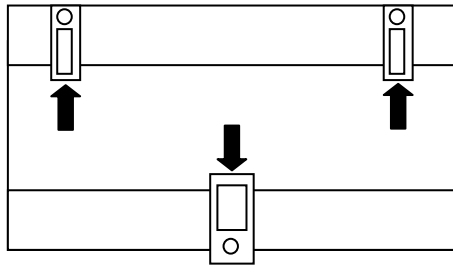


Clips in their original position, for DIN rail mount

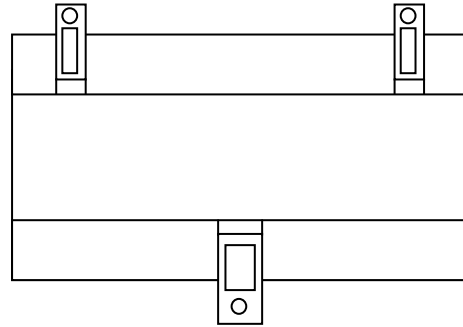

Clips in position for wall mount

2. Use the holes of the clips to fix the box in the wall using screws. Use the template below for the wall holes.


Top view of the box

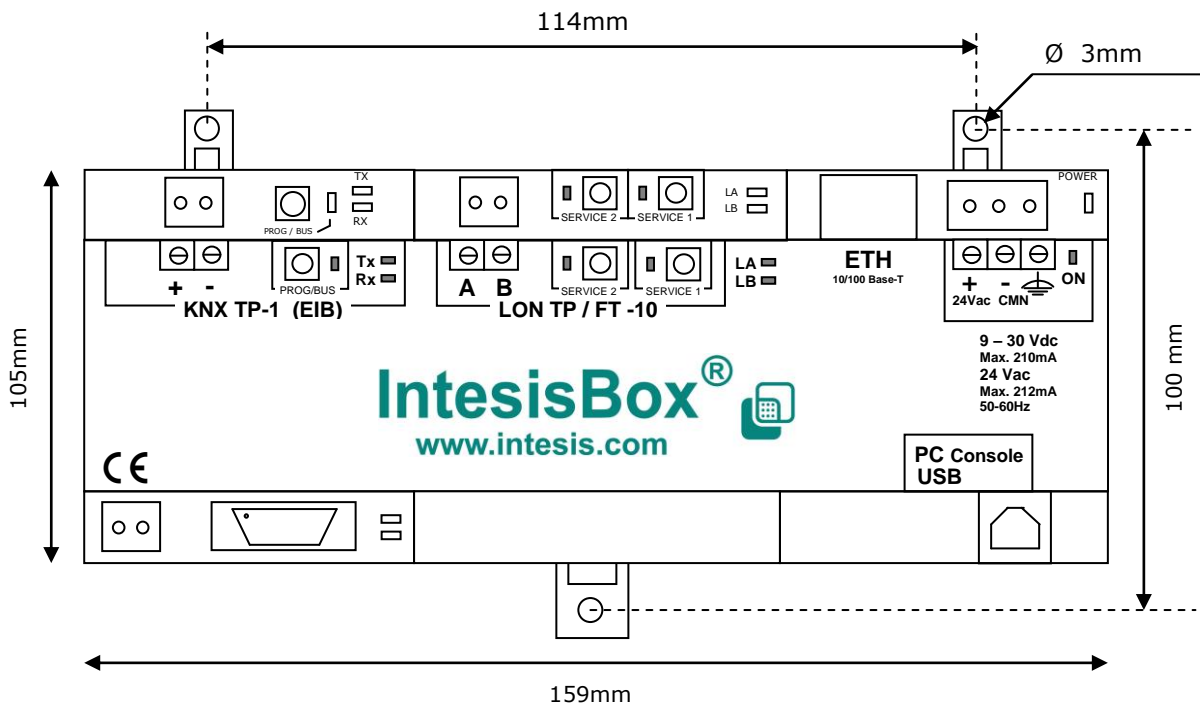


DIN rail mount

With the clips of the box in their original position, insert first the box in the upper edge of the DIN rail and later insert the box in the down part of the rail, using a small screwdriver and following the steps in the figure below.


Side view of the box

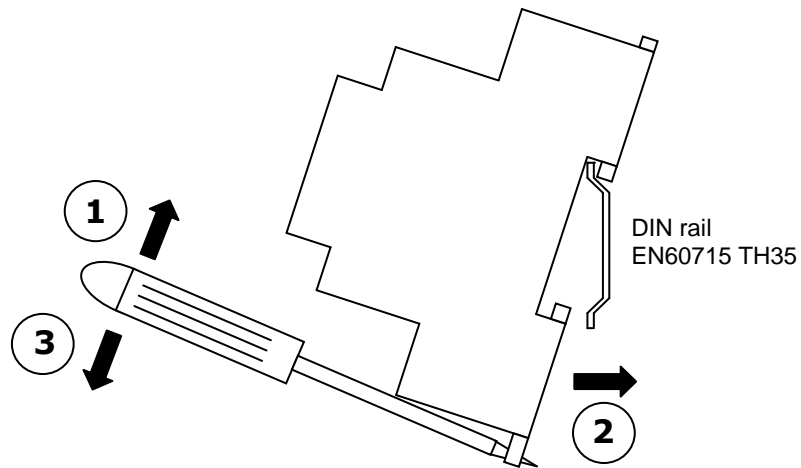

Connections

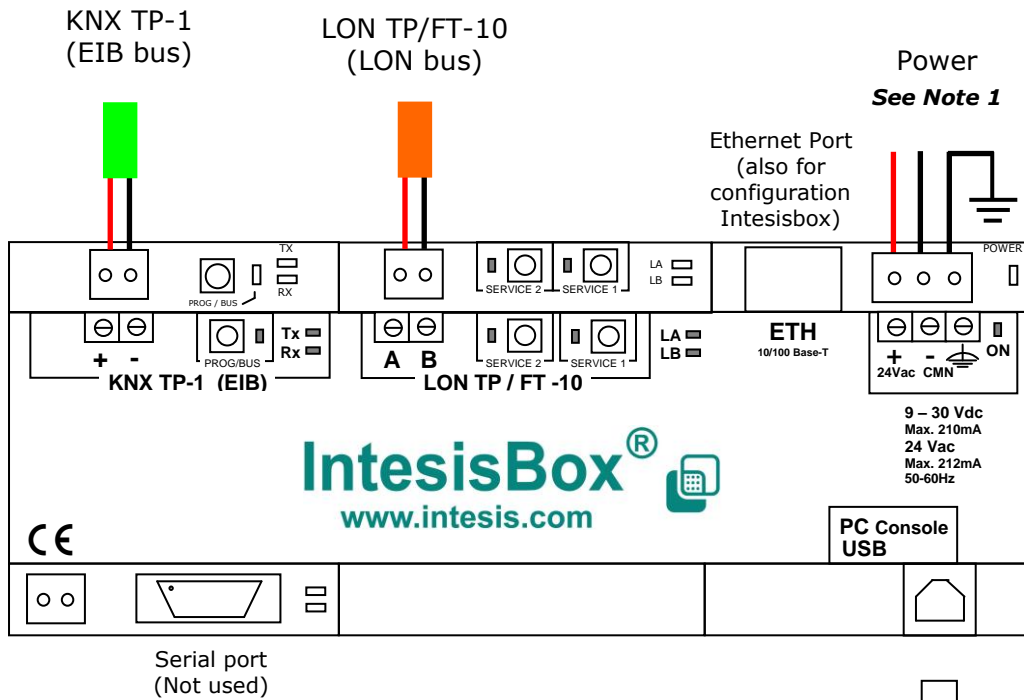

LinkBoxLON
Only for configuration
See Note 2

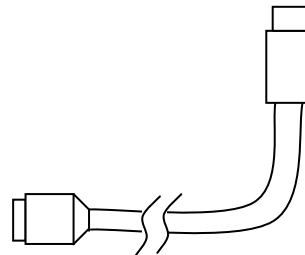

Console Cable USB
standard 1.8 m.
Supplied.

Notes:

- Must use NEC Class 2 or Limited Power Source (LPS) and SELV rated power supply.
If using DC power supply:

 - Respect polarity applied of terminals (+) and (-). Be sure the voltage applied is within the range admitted (9 to 30 Vdc). The power supply can be connected to earth but only through the negative terminal, never through the positive terminal.

If using AC power supply:

 - Make sure the voltage applied is of the value admitted (24 Vac). Do not connect any of the terminals of the AC power supply to earth, and make sure the same power supply is not supplying any other device.
- Use the software LinkBoxLON to configure IntesisBox. Consult the user's manual for details.

Technical characteristics


Enclosure	Plastic, type PC (UL 94 V-0). Dimensions: 159mm x 105mm x 58mm.
Color	Grey. RAL 7035.
Power	De 9 a 30Vcc +/-10%, Máx.: 210mA 24Vca +/-10% 50-60Hz, Máx.: 212mA Must use a NEC Class 2 or Limited Power Source (LPS) and SELV rated power supply. Plug-in screw terminal block (2 poles) for 12 AWG cable.
Terminal wiring (for power supply and low-voltage signals)	Per terminal: solid wires or stranded wires (twisted or with ferrule) 1 core: 0.5mm ² ... 2.5mm ² 2 cores: 0.5mm ² ... 1.5mm ² 3 cores: not permitted
Mounting	Wall DIN rail EN60715 TH35.
LON Port	1 x LON TP/FT-10. Plug-in screw terminal block (2 poles) for 12 AWG cable. TNV-1
KNX Port	1 x KNX TP1 (EIB) opto isolated. Plug-in screw terminal block (2 poles) for 12 AWG cable. TNV-1
LED indicators	1 x Power. 2 x KNX port activity (Tx, Rx). 2 x Gateway status: LA (LON status), LB (KNX status) 1 x KNX programming. ¹ 2 x LON Service LED.
Switches	1 x KNX programming. ¹ 2 x Service LON.
Console port	USB. Type B female standard connector. SELV
Ethernet port	1 x Ethernet 10/100Base-T connector RJ45.
Configuration	Via USB console port and/or Ethernet interface ²
Firmware	Allows upgrades via USB console port and/or Ethernet interface
Operational temperature	0°C to +60°C
Operational humidity	10% to 90%, non condensation
Protection	IP20 (IEC60529).
RoHS conformity	Compliant with RoHS directive (2002/95/CE).
Norms and standards	CE conformity to EMC directive (2004/108/EC) and Low-voltage directive (2006/95/EC) EN 61000-6-2 EN 61000-6-3 EN 60950-1 EN 50491-3

¹ Not operational for the moment. Reserved for future use.

² Standard cable USB type A-B of 1,8 meters length is supplied with the device for connection to a PC USB port for configuring and monitoring the device. The configuration software, compatible with Windows® operating systems, is also supplied.

Dimensions

External dimensions.

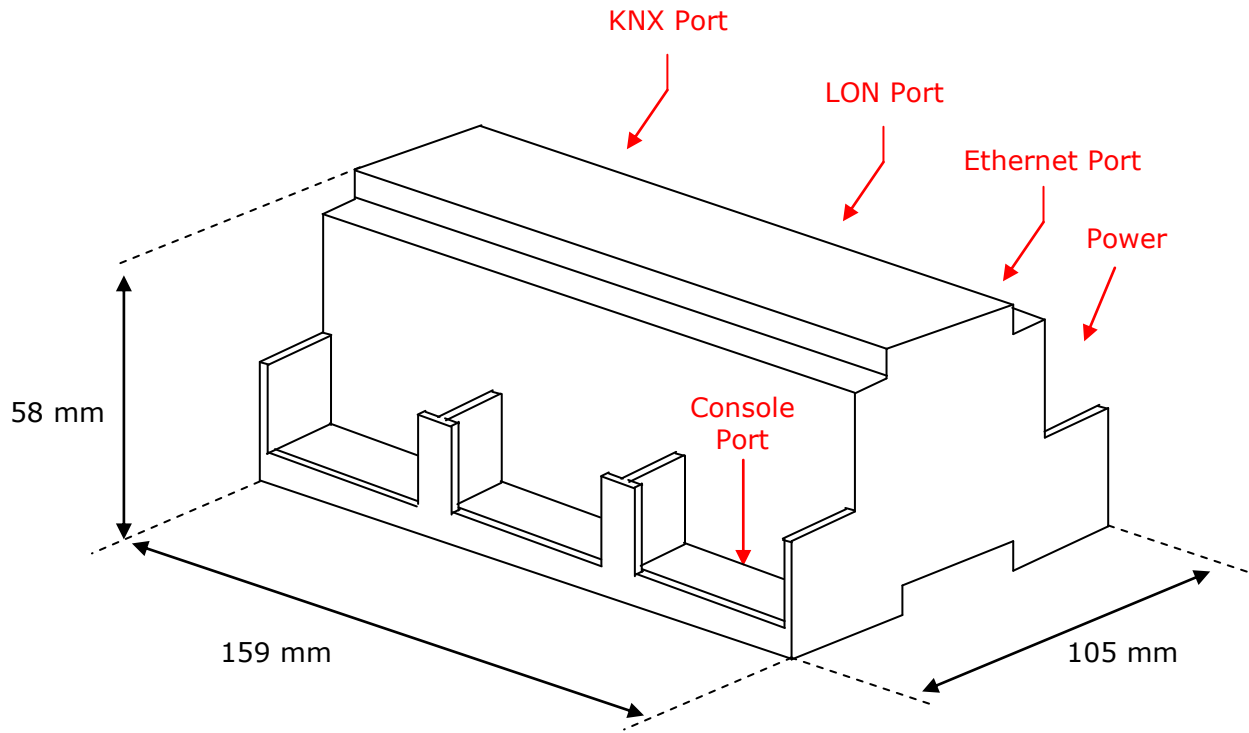

Free space recommended to install the device, with spacing enough for external connections.

